



# evotouch

## TABLE TOP STAND


INSTALLATION / INSTALLATION / INSTALLATIE / INSTALLAZIONE / INSTALLATION / INSTALACIÓN

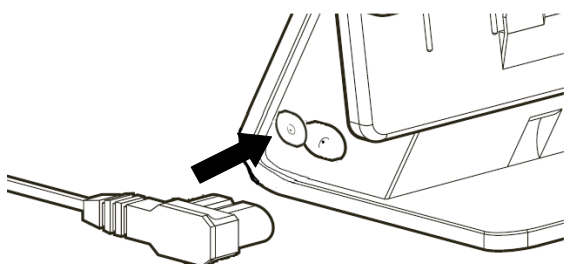

- Ⓒ Plug the power cable in the table stand.
- Ⓓ Verbinden Sie das Netzkabel mit der Tischhalterung.
- Ⓖ Sluit het netsnoer aan op de tafelhouder.
- Ⓘ Collegare il cavo di rete al supporto da tavolo.
- Ⓕ Raccordez le cordon d'alimentation au support de table.
- Ⓔ Conecte el cable de red al soporte de sobremesa.

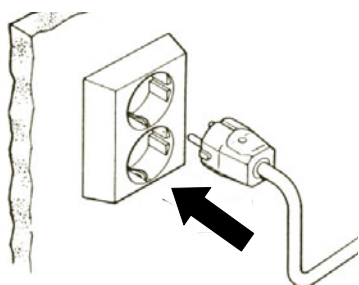

- Ⓒ Plug the power cable in the 230 V AC socket.
- Ⓓ Verbinden Sie das Netzkabel mit einer 230 V AC-Steckdose.
- Ⓖ Sluit het netsnoer aan op een 230 V AC wandcontactdoos.
- Ⓘ Collegare il cavo di rete ad una presa a 230 V AC.
- Ⓕ Branchez le cordon d'alimentation dans une prise de courant 230 V AC.
- Ⓔ Conecte el cable de red a una caja de enchufe de 230 V AC.

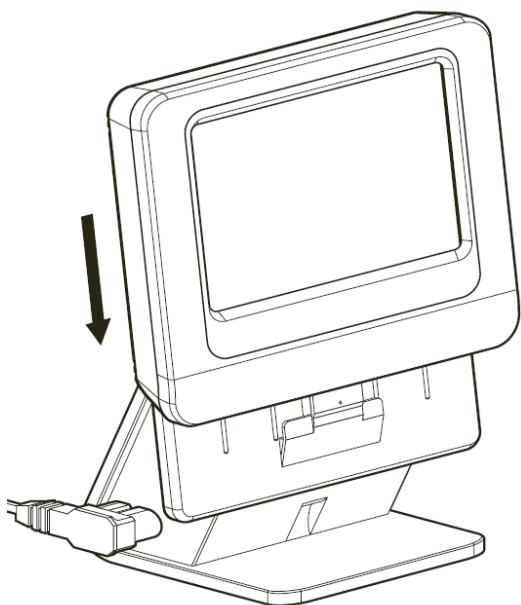


- Ⓒ The table stand supplies power to the evotouch device.  
Mount the device on the stand as shown in the figure.
- Ⓓ Die Tischhalterung versorgt das evotouch Gerät mit Strom.  
Das Gerät in die Halterung stecken, wie abgebildet.
- Ⓖ De tafelhouder is tevens de voeding van de evotouch.  
Breng het apparaat aan in de houder zoals afgebeeld.
- Ⓘ Il supporto da tavolo alimenta elettricamente l'evotouch.  
Applicare l'apparecchio nel supporto da tavolo come illustrato in figura.
- Ⓕ Le support de table alimente l'appareil evotouch en courant.  
Placez l'appareil dans le support comme montré sur l'illustration.
- Ⓔ El soporte de sobremesa alimenta el dispositivo evotouch con corriente.  
Ponga el dispositivo en el soporte, como mostrado en la ilustración.

# evotouch

## FRONT COVER

REPLACE FRONT COVER / FRONTABDECKUNG TAUSCHEN / FRONTJE VERVANGEN / SOSTITUZIONE DEL COPERCHIO FRONTALE / REMPLACER LE CADRE FRONTAL / CAMBIAR LA CUBIERTA FRONTAL

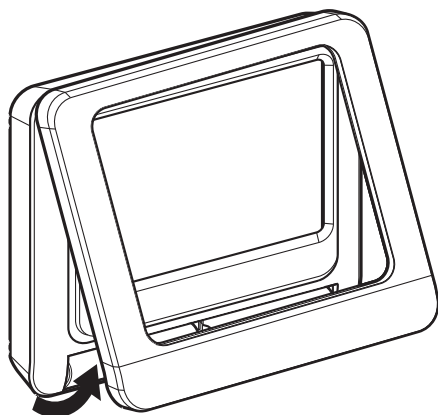

- GB Remove the front cover and clip on a new one.
- D Frontabdeckung abnehmen und neue aufklipsen.
- NL Verwijder het frontje en klik een andere erop vast.
- I Togliere il coperchio frontale ed applicare il coperchio nuovo.
- F Enlever le cadre frontal et clipser le nouveau.
- E Quitar la cubierta frontal y fijarla de nuevo con clips.

## Honeywell

GB Honeywell Control System Ltd.  
Arlington Business Park,  
Bracknell, Berkshire  
RG12 1EB  
Technical Help Desk: 08457 678999  
[www.honeywelluk.com](http://www.honeywelluk.com)

D Automation and Control Solutions  
Honeywell GmbH  
Hardhofweg  
D-74821 Mosbach / Germany  
Tel.: 0800 / 224 46 65  
Fax: 0800 / 0466 388  
[info.haustechnik@honeywell.com](mailto:info.haustechnik@honeywell.com)  
[www.honeywell.de/haustechnik](http://www.honeywell.de/haustechnik)

NL HONEYWELL B.V.  
Postbus 12683  
1100 AR Amsterdam Z.O.  
Telefoon: (020) 656392  
Fax: (020) 5656390  
[www.honeywell.nl](http://www.honeywell.nl)

I Honeywell Srl  
Via Antonio e Gerardo Philips 12  
20052 Monza (MI)  
Tel.: (39) 039 2165 1  
Fax: (39) 039 2165 288  
[www.honeywell.it](http://www.honeywell.it)

F Honeywell ACS CP  
72 Chemin de la Noue  
74380 Cranves Sales  
Tel : (33) (0) 4.50.31.67.30  
Fax : (33) (0) 4.50.31.67.40  
[www.honeywell-confort.com](http://www.honeywell-confort.com)

E Honeywell S.L.  
Josefa Valcárcel 24  
28027 Madrid  
Tel: 091 3136272  
[www.honeywell.es](http://www.honeywell.es)

Subject to change without notice.

Manufacturing location certified to

**DIN EN ISO**  
**9001/14001**

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, ACS-ECC EMEA, Z.A. La Pièce 16, 1180 Rolle, Switzerland by its Authorised Representative Honeywell Inc.



50048234-001A